



DRENCH INSTRUCTIONS

AGES: 8+

 
WHAT'S INCLUDED:

- 1 DRENCH CAN
- 2 ICE SHAPED DICE

WHAT'S NOT INCLUDED:


- (3) AAA BATTERIES
- WATER

HOW TO SET UP DRENCH

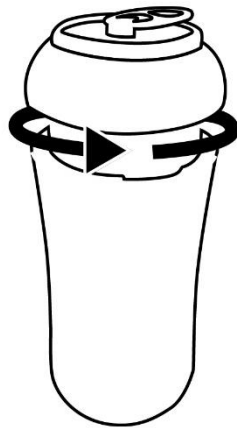


1.

 UNSCREW
THE TOP

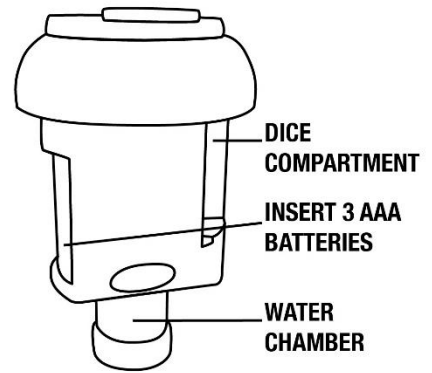


 2.

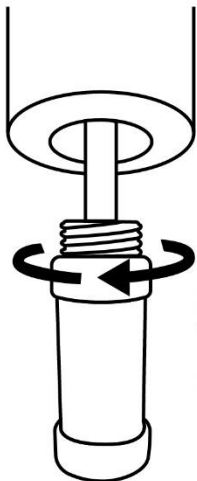


UNSCREW
WATER
CHAMBER

 3.

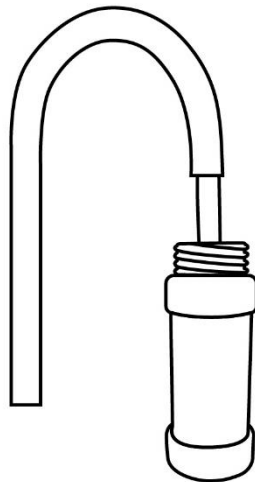

4.

- FILL WITH WATER
- SCREW WATER CHAMBER BACK ON
- INSERT TOP ASSEMBLY BACK INTO CAN AND TWIST

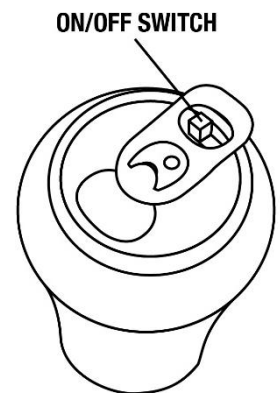

5.

READY TO PLAY

- Each player rolls the NUMBER DIE. The player with the highest number goes first.
- Players will take turns going clockwise, always passing DRENCH to the left. DRENCH is passed left of the last player who shakes DRENCH.
- Turn on DRENCH. DRENCH will greet you and game play will begin.
- PLAYER ONE rolls both DICE. Follow the DICE instructions.

ACTION DIE

- K = Keep DRENCH
- S = Skip your turn and pass DRENCH to the player on your left
- P = Pick the player you want to take your turn

NUMBER DIE

- Shake DRENCH the number of times on the NUMBER DIE
- Shake DRENCH the number of times on the dice. Put DRENCH within 6 inches of your chin and gently pull the TAB.
- NOTE: Do not overpull the TAB. Once you hear the TAB OPENING SOUND – release. Overpulling the TAB may damage DRENCH. Ouch!
- If you get sprayed, you are out for that round. The last player to stay dry earns (1) point.
- NOTE: IF YOU GET SPRAYED AND MOVE THE CAN AWAY FROM YOUR FACE, YOU WILL LOSE (1) POINT AND YOU ARE OUT OF THAT ROUND. You cannot lose a point if you do not have any points.
- Begin the next round and repeat.
- The first player to reach 3 points wins the game!
- Do the DRENCH Victory Dance!

NOTE:

Remember, always empty DRENCH after gameplay. Remove batteries when not in use for any extended period of time. DO NOT FILL **DRENCH** WITH ANY LIQUIDS OTHER THAN WATER AS IT MIGHT AFFECT PERFORMANCE AND DAMAGE **DRENCH**. Again, Ouch!!!

TROUBLE SHOOTING:

- If DRENCH doesn't spray or spray is light, make sure the water chamber is filled with water.
- If DRENCH is not behaving, make sure the batteries are in tight or try new batteries.
- For other trouble shooting, contact DRENCH's customer service team at 414-357-3997.



Visit www.mukikim.com for more fun toys!

Distributed by: Mukikim Toys

6812 W Calumet Rd, Milwaukee, WI 53223

Warning: Do not point can directly into eyes.

Warning: CHOKING HAZARD – Small parts. Not for children under 3 years.

Made in China