
Aboveground Pool Manual Diverter System

(kit#SK-35)

- 1) Use the basic configuration as shown at right.
- 2) For flex hose, use adapters provided. For rigid PVC pipe, purchase teflon tape glue and four 1 1/2" MPTxSOC where you purchase your PVC pipe.
- 3) Turn the handle perpendicular to close the valve. By closing the valve, water is forced through the solar heater, sending heat to your pool.
- 4) Turn the handle parallel to open the valve. By opening the valve, water will follow the path of least resistance back to your pool, not through the solar heater.

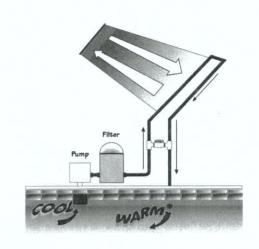

Manual Diverter using rigid PVC pipe Diverter with flex hose adapters (provided) FROM SOLAR FROM SOLAR FROM SOLAR FROM SOLAR OFF SOLAR OFF