



14480 62nd St. N. Clearwater, Florida 33760

## Assembly Instructions


Your motor cover will fit 1/3 HP to 2 HP motors and is designed to protect them from the effects of sun and rain.

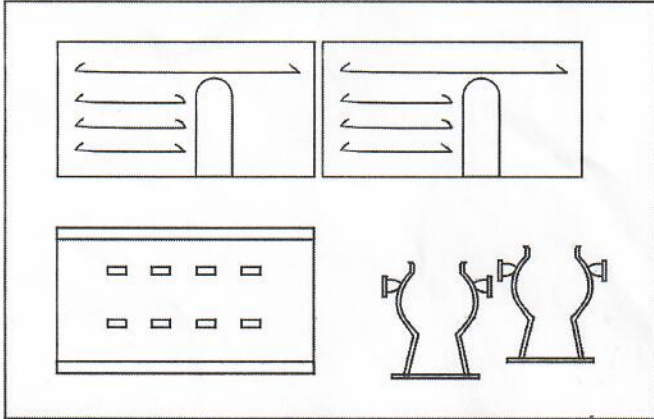

1. The motor cover consists of 5 parts: top, two side covers and two clamps as shown.

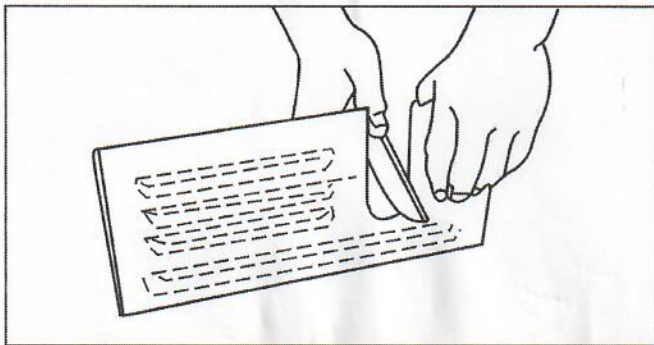


2. Most motors will require a slot to fit over conduit providing electrical connection to motor. Lay side cover on flat surface and cut knockout free and remove. The rough edges may be trimmed with a file or knife.

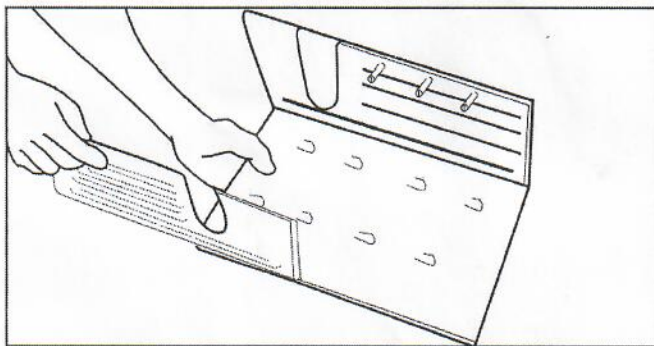


3. Position top cover with inside of cover facing upward. Slide both side covers into grooves until they both align with top cover.

**NOTE:** Be sure side covers have louvers facing outward and the openings of the louvers are facing upward.

# Universal Motor Cover

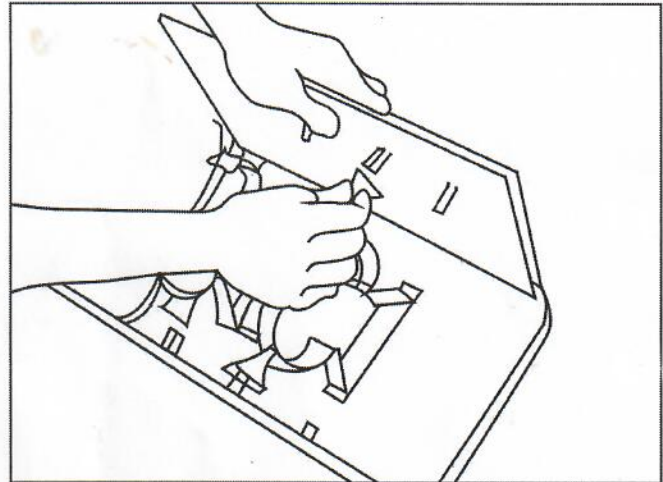

4. Determine which clamp positions on the side covers and inside top best fits your motor. Four positions are provided, you should select the two optimum positions.

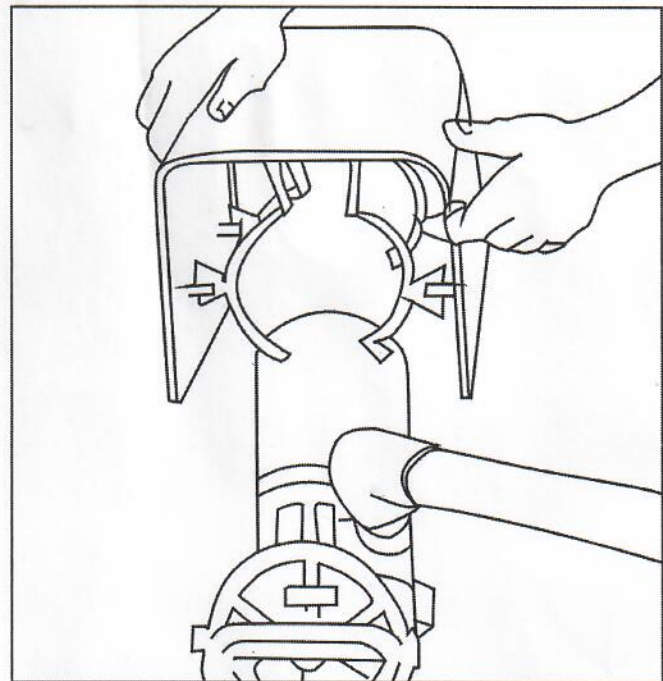

5. **CAUTION** When placing motor cover in position, do not cover air inlet or outlet on motor with motor clamps.