
THE ELITE REEL SYSTEM

HV-18 / HV-24 / HV-28 Assembly and Operation Instructions

- ** HV-18 For Aboveground Pools up to 18' Width **

 ** HV-24 For Aboveground Pools up to 19' to 24' Width **

 ** HV-28 For Aboveground Pools up to 25' to 28' Width **

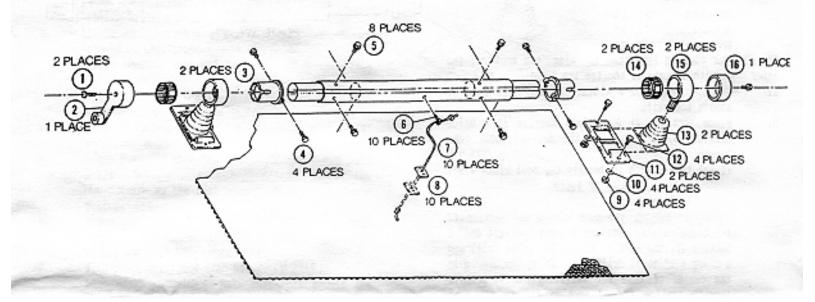

| | | | | | TOOLS I | REQUIRED | | | | |
|-----|-------------------------|-----------|-------|--------|-------------|---------------|------------------|----------------|--------|------|
| la. | a. Power Drill | | | | 2. Hex Sock | et Wrench wi | th | 3. Phillips Sc | | |
| 1b. | Metal Cutting D | rill Bits | | | 7/1 | 6" Hex Socket | | 4. Magic Marke | r Pen | |
| | 1/8", 1/4", 5/ | 32°, 1/2 | • | | | | | 1.00 (g (1 (g) | | |
| | | - | | HV- | 18/24/2 | PARTS | LIST | | 146.0 | |
| | PART DESCRIPTION | | | PART # | QTY. | | PART DESCRIPTION | M PART # | QTY. | |
| 1. | Handwheel Screw (1-1/4) | | | 3054 | 2 | 9. | Base Mount Mut | 3052 | 4 | |
| 2. | Handcrank (w/knob) | | | 2015 | 1 | 10. | Base Mount Wash | ier 3053 | .4 | |
| 3. | End Cap | | | 2002 | 2 | 11. | Base Mount | 2012 | 2 | |
| 4. | End Cap Screw (3/4") | | | 3055 | 4 | 12. | Base Hount Bolt | 3051 | 4 | |
| 5. | Meoprene Tube Fastener | | | 3056 | 8 | 13. | HV-18/24/28 Bas | se 2010 | 2 | |
| 6. | Tube Bye Screws | | | 3050 | 10 | 14. | Bearing (L) | 2006 | 2 . | |
| 7. | 2 Ft. White Cord | | | 5004 | 10 | 15. | Yoke | 2011 | 2 | |
| 8. | Cord Plate (Set |) | | 2008 | 10 | 16. | Yoke Cap | 2013 | 1 | |
| +00 | W 100 W 100 A 2 100 W | HER S. | 100 | PARTS | UNIQUE | TO EACH | SYSTEM | E [50354-136-1 | | ili. |
| | HV-18 | | HV-24 | | | CONTRACTOR OF | HV-28 | | | |
| | Description | Part # | Qty. | | Description | Part # | Qty. | Description | Part # | Qty. |
| 17. | 7'0" Tube (0) | 3004 | 1 | 17. | 8'11" Tube | (0) 3006 | 1 17. | 10'3" Tube (0) | 3008 | 1 |
| 18. | 7'0" Tube (I) | 3003 | 2 | 18. | 8'11" Tube | (I) 3005 | 2 18. | 10'3" Tube (I) | 3007 | 2 |

I. PLACEMENT OF REELS

Round Pool: Oval Pool: Install reel in the center of your pool.
Install reel near the end of pool before

radius.

MOTE: Make certain there is a flat surface on the top rail and that there is no obstruction under top rail to prevent mounting the base mount.

II. DETERMINING TUBE LENGTH

HOTES:

A) Both lengths of "λ" should always be equal, and never exceed the following:

HV-18: 5' 10"

BV-24: 7' 8"

HV-28: 9' 2"

B) If your pool is <u>less than 13' wide</u>, you must cut the inner tube with backsaw to shorten its length.

 Measure your pool's width. From inside edge of pool's top rails.

 Place sections #1 & #3 into section #2. Slide sections #1 & #3 out to the desired TOTAL tube length.

(Total tube length is usually the pool width + 9")
III. ASSEMBLY OF TUBING

(Refer to Diagram #2)

- To fasten tubing, you must always use Section #2
 for measurements. Heasure 3" from the left end of
 Section #2, and mark on tube. Use power drill and
 a sharp 1/2" metal drill bit. Using the groove in
 the center of tube for reference, drill a hole
 through section #2 and section #1. Place tube
 neoprene fastener into the hole. Use a her socket
 wrench with 7/16" socket and tighten bex head bolt
 down completely. (Refer to Step #1/Diagram #2)
- Rotate tubes 90 degrees, measure 10* from left end
 of section #2. Drill hole through section #2 and
 section #1, place tube neoprene fastener into hole
 and tighten completely. (Refer to Step #2)
- Rotate tubes another 90 degrees, measure 3" from left end of section #2. Drill hole through section #2 and section #1, place tube neoprene fastener into hole and tighten completely. (Refer to Step #3)
- Rotate tubes another 90 degrees, measure 10* from left end of section #2. Repeat directions of Step #2.
- 5. Go back to all the tube fasteners and re-tighten.
- To fasten Section #2 and Section #3 together, take measurements from right end of section #2, then follow steps #1-5.

IV. ATTACE END CAP

(Refer to Diagram #3)

Place End Cap (Part #2002) on end of section #1. Make sure end cap inserts line up with indentions of tubing. Using the end cap pre-drilled hole as a guide. Use power drill and 5/32° drill bit. Drill hole thru tube and fasten End Cap screw (Part #3005). Tighten screw down. Drill only 1 hole per End Cap. DO NOT DRILL BOTH HOLES OF THE END CAP. The 2nd hole is a spare, and is there for your convenience. To fasten End Cap to section #3 repeat previous directions.

DIAGRAM #1

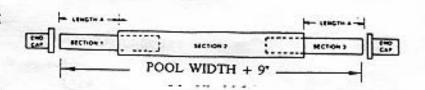 


DIAGRAM #2


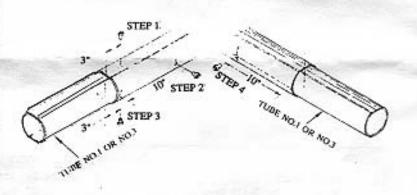


DIAGRAM #3

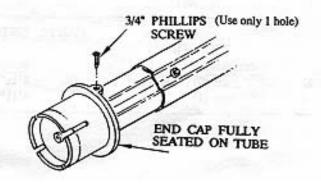

V. DRILL BOLES FOR TUBE EYE SCREWS

(Refer to Diagram #4)

- Measure 8" from end cap in towards the center of 1. tube. Mark tube with magic marker. Do this on both sides of tubing.
- 2. Mark 8 equally spaced marks on the tube. (Diagram (4). Always mark in a straight line.
- With power drill and 1/8" bit, drill a hole at each 3. marked space.
- Insert tube eye screw and tighten down. (DO NOT 4. OVER-TIGHTEN)

VI. INSTALLING BASE MOONT/HANDWHEEL/YOKE CAP (Refer to Diagrams #5, #6, #7.)

- Place each base mount onto top rail (The "STOP" should be positioned toward the pool).
- 2. Place bearing over end cap and insert into Yoke (Diagram #6).
- Slide yoke into top of base and slide base into base mount until it hits "STOP".
- Place handwheel onto end cap and secure with 1-1/4" handwheel screw.
- Place Yoke Cap onto other end cap and secure with 1-1/4" handwheel screw. Always place the Handcrank on the most convenient side for cover rollup.
- Place reel and base mounts onto top rail. This verifies the tubing is wide enough. Use magic marker and mark base mount holes.
- With power drill and 1/4" bit drill 2 holes, using base mount as quide. Make sure base mounts are straight.
- Insert 1" bex head base mount bolt into hole, place washer and nut under top rail. Tighten down with 7/16" hex socket. (Do both sides).

VII. ATTACHING THE SOLAR COVER TO REEL (Refer to Diagram #8, #9.)

- Your cover should be on the pool and the cover 1. should be trimmed to inside of pool's top rail.
- 2. With a magic marker, place a mark at each edge of the cover directly below the tube.
- Remove cover from pool and lay out on flat ground. 3.
- With a magic marker, draw a straight line between 4. the two marks on the cover.
- 5. Roll cover up until you reach the drawn line.
- 6. Measure in 8 inches from each side of cover, and place a cross mark on the line.
- 7. From this position, take the measurement used between the first tube marks. (Diagram #8) and space cross marks down the line to the second 8 inch measurement.


VIII. ATTACHING THE CORD PLAYES


(Refer to Diagram #10.)

1. Take one set (male and female) of the cord plates and place the female plate over the first cross, 8 inches from the cover edge. Make sure the center hole is placed above the cross. (Refer to Insert in Diagram #8).

DIAGRAM #4

TUBE SECTIONS

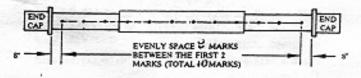 

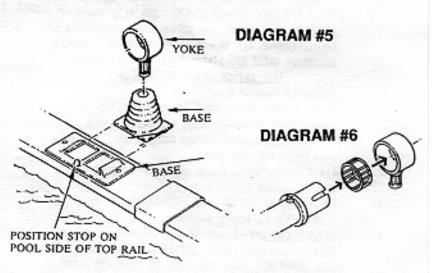

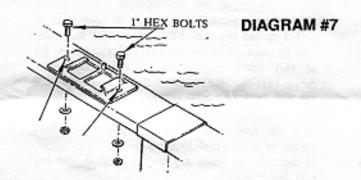


DIAGRAM #8


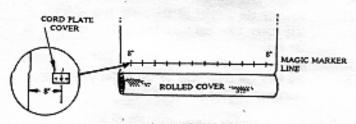


DIAGRAM #9

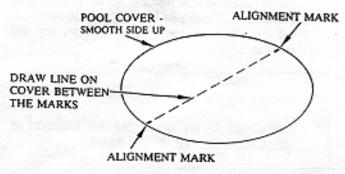

With a sharp instrument, punch 3 holes through the 2. plate and cover. (Make certain the HOLES are clean of excess cover material.)

Place a male plate under the cover directly beneath

the female plate.

Carefully insert the 2 male prongs through the cover and into female plate, then snap together. If the plates do not snap into position with normal force, remove all excess cover material. Repeat procedure until all plates have been installed.

IX. ATTACHING THE WHITE CORD

(Refer to Diagram #11.)

Place 2 foot white cord through the top of the female plate in center hole, and push through cover and male plate until enough cord remains to tie a knot below the male plate.

Tie a secure knot, large enough so that it cannot

go through the center hole.

Install cover on the pool, attempting to keep one

side in the rolled up position.

ENTER POOL. Attach top of the white cord through tube eye screws. MAKE CERTAIN ALL CORDS HAVE THE SAME TENSION. Then tie cord to tube eye screw, being careful to keep equal tension.

OPERATING INSTRUCTIONS

- Slowly turn handwheel clockwise; the cover will be . 1. lifted up and over the tube. Should either cover edge be hampered by the top rail, straighten it out so that cover remains smooth and wrinkle-free during roll-up. MAKE CERTAIN COVER IS REMOVED FROM THE POOL UNIFORMLY ONTO TUBE.
- When cover is completely rolled up on the tube, lift the handwheel, tube, and yoke and rotate system to any desired location.

If desired, the bases may now be removed from top 3.

rail and stored.

PLACING COVER BACK ON THE POOL

- Turn handwheel counterclockwise until cover makes contact with the pool.
- Separate the 2 edges of the cover from each other.
- Grip cover edge and walk slowly down the pool to 3. the end.
- Roll out 5-8 feet of cover at a time. 4.
- Now walk the cover down to the end of pool. Repeat procedure for 2nd part of cover.


HELPFUL HINTS


Remove Handcrank & yoke cap at the beginning of each season. Clean yoke bushing, bearing race, and end cap with warm soapy water. Rinse, dry and reassemble.

STORAGE

Always store the reel with an eye for safety.

MANUFACTURER IS NOT RESPONSIBLE FOR ACCIDENTS OR DAMAGE RESULTING FROM UNSAFE STORAGE.

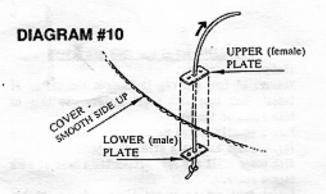

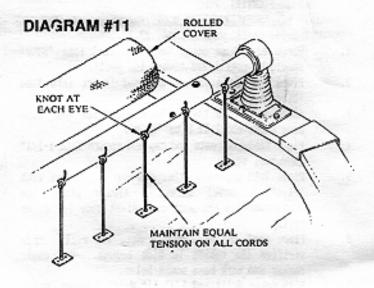



1865 Grand Island Blvd. Grand Island, N.Y. 14072 1-800-441-7789 info@island-pools.com http://www.poolsupplies.com

ELITE REEL SYSTEMS

1 YEAR WARRANTY REGISTRATION

To insure product guarantee, complete and mail this card within 30 days of purchase.

| ate of purchase: | urchaser: | Purchased From: |
|---|------------------|------------------------------------|
| ddress: Type of Reel (Circle) Aboveground ity/State: Model # (Circle) HV-18 HV-24 HV-28 | ate of purchase: | Telephone: |
| ity/State: HV-18 HV-24 HV-28 | ddress: | Type of Reel (Circle) Aboveground |
| | ity/State: | Model # (Circle) HV-18 HV-24 HV-28 |

have read the manufacturer's installation and Use Instructions on the reverse side of the Limited Warranty, and I understand said instructions must be adhered to, or the warranty may be validated.

| 1 |
|------------|
| / Numbe |
| Security |
| our Social |
| > |
| Signature: |
| Purchasers |

ELITE REEL SYSTEMS – 1 YEAR LIMITED WARRANTY

Your new Elite Reel System is guaranteed by the manufacturer to be free from defects in material and workmanship under normal use in accordance with the manufacturer's Installation and Use Instructions. All reels shipped from the manufacturer on a warranty claim will be freight collect. This warranty does not apply to damage resulting from accident, misuse or abuse of the product, or alteration of modification of the product after your purchase.

To file a claim contact: HORIZON VENTURES, P.O. BOX 513, DEERFIELD, IL 60015, ATTENTION: WARRANTY DEPARTMENT

EXCLUDED FROM THIS WARRANTY ARE: Cord Plates, 2' Cord
THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, REPLACEMENT OF DEFECTIVE PRODUCTS AS PROVIDED UNDER THIS
WARRANTY IS YOUR EXCLUSIVE REMEDY. THE MANUFACTURER WILL NOT BE LIABLE IN CONTRACT OR TORT FOR ANY DIRECT CON-SEQUENTIAL, SPECIAL OR INCIDENTAL LOSS OR DAMAGE ARISING OUT OF THE USE OF INABILITY TO USE THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TERMS OF GUARANTEE

This reel system comes with a 1 year limited warranty. From date of purchase, should the reel exhibit defects per the above limitations, the original purchaser shall pay only the following percent of the manufacturers suggested list price to receive

1st Year - FREE REPLACEMENT